


1. CG100H4-MD, 4 button scene control panel
2. CG100H8-MD, 8 button scene control panel
3. CG100HTH, Thermostat
4. CG100HHB, Doorbell switch

Wiring Diagram

Wiring diagram :CG100H4-MD, CG100H8-MD, CG100HTH

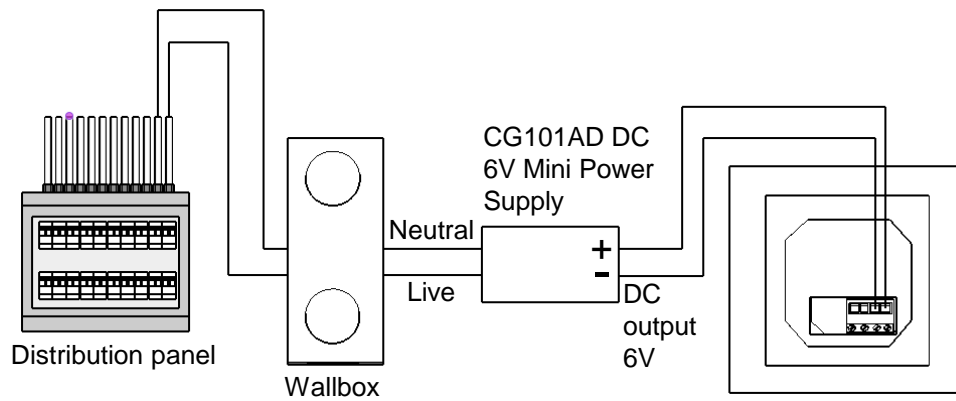

Wiring diagram: CG100HHB

