


1. CG800H1-MD, Scene Control Panel, 1 Scene
2. CG100H2-MD, Scene Control Panel, 4 Scenes
3. CG800HHB, Doorbell switch

Wiring Diagram

Wiring diagram :CG800H1-MD, CG800H2-MD

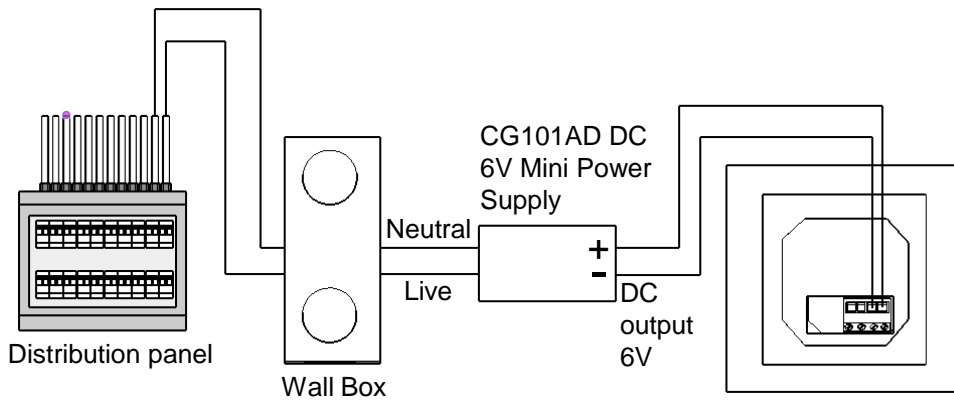

Wiring diagram: CG800HHB

